


Operation


3 Connecting the air hose

- Attach the 1/4 in. female plug (L) into the air line outlet (C). Plug the 1/4 in. female plug (L) into the quick coupler, which is pre-attached to the air compressor.
- Connect the male end of the air hose (M) into the female plug (L).
- Secure the connections with sealant tape (K) to prevent air leaks.

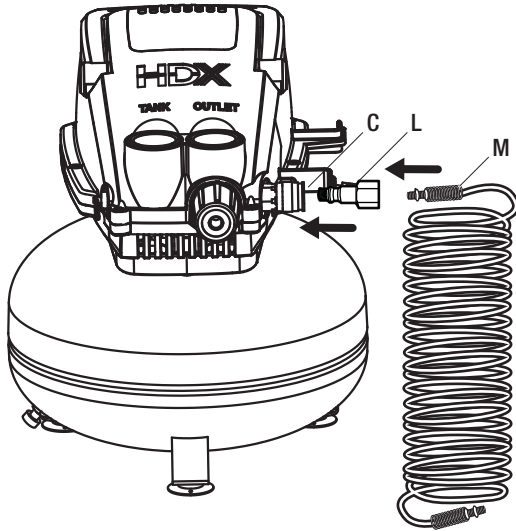

4 Attaching accessories directly to the air hose

- If using air tools (not included), attach the 1/4 in. female quick coupler (U) to the air hose (M) and then insert the 1/4 in. male plug (V) into the female quick coupler (U). Connect your air tool (not included) into the other end of the male plug (V).
- If using the blow gun (N) or dual tire chuck (T), connect these accessories directly to the air hose (M).
- Secure connections with sealant tape (K) if necessary.

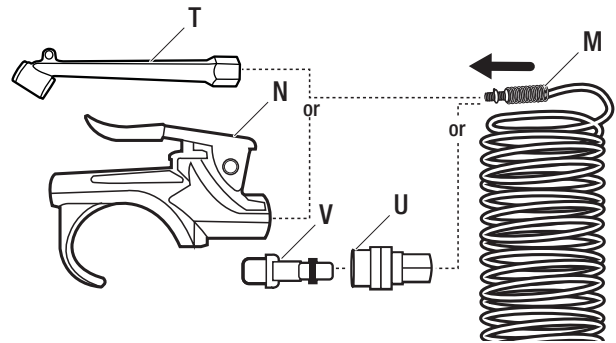

5 Connecting accessories to the blow gun



WARNING: To avoid personal injury, always reduce the regulator to lower pressure before changing accessories.

- Once the blow gun (N) is connected as described in the previous step, attach either the blow gun adapter (O) with tapered nozzle (P) or inflation needle (R), safety nozzle (Q), or rubber tip nozzle (S).
- Secure connections with sealant tape (K) if necessary.

